



**REFLOW-KIT<sup>®</sup>**  
Beta LAYOUT

# Reflow Controller V3 PRO

## Operating Instructions



[www.beta-eSTORE.com](http://www.beta-eSTORE.com)

Beta LAYOUT Ltd. • Bay 98 • Shannon Free Zone, Co. Clare • Ireland

Telefon + 353 (0) 61 70 11 70 • Fax + 353 (0) 61 70 11 65

**Beta**  
LAYOUT  
create : electronics



**REFLOW-KIT®**  
Beta LAYOUT

## Contents

<b>1</b>	<b>General information</b>	<b>4</b>
1.1	Warranty und liability	4
<b>2</b>	<b>Safety</b>	<b>4</b>
2.1	Intended use	4
2.2	Safety instructions	5
<b>3</b>	<b>Introduction</b>	<b>6</b>
<b>4</b>	<b>Technical data</b>	<b>7</b>
<b>5</b>	<b>Operating and display elements</b>	<b>7</b>
<b>6</b>	<b>Self-test</b>	<b>9</b>
<b>7</b>	<b>Operating modes/soldering</b>	<b>9</b>
7.1	Appropriate oven	9
7.2	Preparing the oven	10
7.3	Learning the oven characteristics	11
7.4	Reflow soldering	12
<b>8</b>	<b>Setting parameters via the display</b>	<b>14</b>
8.1	Switching the controller to parameterisation mode	14
8.2	Menu layout	15
8.3	Main menu	15
8.4	"Settings" menu	15
8.4.1	Profiles	16
8.4.2	Using the parameters	17
8.4.3	Preheat	17
8.4.4	Soak	18



# REFLOW-KIT®

Beta LAYOUT

8.4.5 Reflow .....	19
8.4.6 Dwell .....	20
8.5 "Base values" menu .....	21
8.5.1 Automatic phase extension .....	21
8.5.2 Temperature calibration .....	22
8.5.3 Setting the measurement unit "Temperature" .....	23
8.5.4 Setting background brightness .....	23
8.5.5 Restoring default values .....	24
<b>9 Setting parameters via the computer .....</b>	<b>24</b>
9.1 Connecting to the computer .....	24
9.2 Installing the USB driver .....	25
9.3 Interface parameters .....	26
9.4 Terminal program .....	26
9.5 Communication test .....	27
9.6 General commands .....	28
9.7 Commands for parameter setting and calibration .....	30
9.8 Manual operation .....	32
<b>10 Software update instructions .....</b>	<b>34</b>
<b>11 Error messages .....</b>	<b>37</b>
<b>12 Maintenance and disposal .....</b>	<b>37</b>
<b>13 Guarantee.....</b>	<b>38</b>
<b>14 Connecting the reflow controller to the reflow oven and PC .....</b>	<b>39</b>



**REFLOW-KIT®**  
Beta LAYOUT

## 1 General information

Please read this guide carefully prior to using the reflow controller as it contains important information on the functions, operation and maintenance of the product.

**Note:**

This documentation is based on the product knowledge available at the time of manufacture. The accuracy and completeness of the work in question cannot be guaranteed. Technical changes for product advancement are excluded. This documentation and the information it contains are subject to copyright and cannot be reproduced either in full or in part or distributed to third parties without the written consent of the publisher.

### 1.1 Warranty and liability

Our "General sales and delivery conditions" are always applicable.  
Beta LAYOUT excludes any warranty or liability claims for personal and material damages caused by one or more of the following:

- inappropriate use,
- incorrect assembly, setup or operation,
- failing to observe information, requests or warnings in the operating instructions,
- unauthorised structural modifications to the equipment,
- improperly carried out maintenance or repairs.

Any damage caused by failing to follow the operating instructions will render the guarantee/warranty null and void. We accept no liability for consequential damages arising from the above.

## 2 Safety

### 2.1 Intended use

This product can only be used to control a reflow soldering oven.

Using it for any purpose other than the above will lead to product damage, and inappropriate use is also associated with hazards such as short circuits, fire, electric shock etc. The product must not be changed or modified in any way.

This product complies with all legal, national and European requirements.  
All company names and product designs are trademarks of the respective owners.  
All rights reserved.

Please refer to the controller operating instructions manual, which is available for download as a pdf on **[www.beta-eSTORE.com/RKCV3](http://www.beta-eSTORE.com/RKCV3)**



**REFLOW-KIT®**  
Beta LAYOUT

## 2.2 Safety instructions

Any damage caused by failure to follow the operating instructions will render the guarantee/warranty null and void. We accept no liability for consequential damages. We also accept no liability for material or personal damages caused by inappropriate handling or failure to follow the safety instructions. In such cases, the warranty/guarantee is null and void.

- For safety and licensing (CE) reasons, unauthorised reconfiguration or modification of the product is not permitted. Never disassemble the product.
- The product is designed for operation through the public mains supply only (230V~/50Hz) and must be properly earthed. Plug the controller into a regulation-compliant earth socket.
- This product is not a toy and is not intended for use by children. Operate and store the product out of children's reach. Children may attempt to insert objects into the openings of the unit, risking fatal electric shock.
- The product is only suited to dry indoor areas and must not get damp or wet. Never use the product outdoors or in damp or humid conditions, and never handle it with damp or wet hands. This could lead to fatal electric shock.
- The product must always be operated under supervision.
- Due to the risk of fire or explosion, the product should not be operated in any environment that is or may be exposed to flammable gases, fumes or types of dust.
- This product is intended for private use only and not for commercial use.
- The product is only intended to regulate a soldering or reflow oven and should not be connected to any other devices.
- The product only isolates one pole of the socket on the connection cable from the mains. Even if the product is switched off, mains voltage may still be present around the socket and the connected device.
- Do not use the product as a "circuit breaker" for the connected device.
- Before connecting the product to a PC, you must unplug it from the mains socket.
- Handle the product with care as it can be damaged by impact or as a result of falling from even low heights.
- Do not continue to use the product if the product housing gets damaged. If it is still connected to the mains, do not touch it or any other attached devices. First, break off the electrical circuit to which the product is connected (switch off the automatic circuit breaker). You can now unplug the attached device and remove the controller from the mains socket. Then bring the product to a repair workshop or dispose of it in an environmentally appropriate way.
- Dispose of packaging carefully as it could be dangerous in the hands of children.
- If you are concerned about the functioning, operation or safety of the product, consult a specialist. Do not work on the product yourself.



## REFLOW-KIT®

Beta LAYOUT

### 3 Introduction

The reflow controller controls your reflow oven kit. To get the best soldering result, specified times and temperatures must be maintained when soldering SMD components using solder paste.

The reflow controller regulates your reflow oven in such a way that times and temperatures are maintained and the optimum soldering result is achieved.

The boards and components are heated gradually during a preheat phase in order to avoid mechanical stress in those elements.


Following the preheat phase, the temperature is raised to just below the soldering temperature. In this way, the volatile components of the solder paste can escape with no blistering.

The oven is then heated to the soldering temperature. The solder paste liquefies and the components adhere to the board. The temperature is kept stable during the soldering process in order to avoid damage through overheating.

The controller beeps to signal the end of the soldering phase.

The soldered board can now be removed from the oven.

You can adapt the solder curves to your own requirements. Up to five different curves can be stored in the reflow controller.

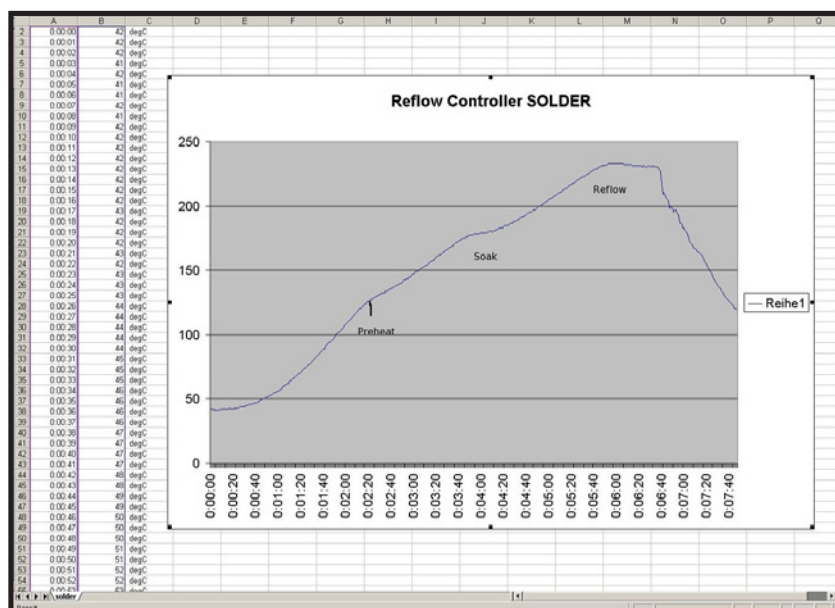



**REFLOW-KIT®**  
Beta LAYOUT

## 4 Technical data

Operating voltage: 230 V/AC 50 Hz (EU)  
110 V/AC 60 Hz (USA)


Fuse: 8A-T (EU)  
15A-T (USA)

Maximum power consumption: 1500 W

PC connection: USB

## 5 Operating and display elements

The reflow controller has a console with cables for connection to the mains and the reflow oven. The console has 7 control buttons, 2 LEDs for controlling data traffic via the USB port, a display and an acoustic alarm.

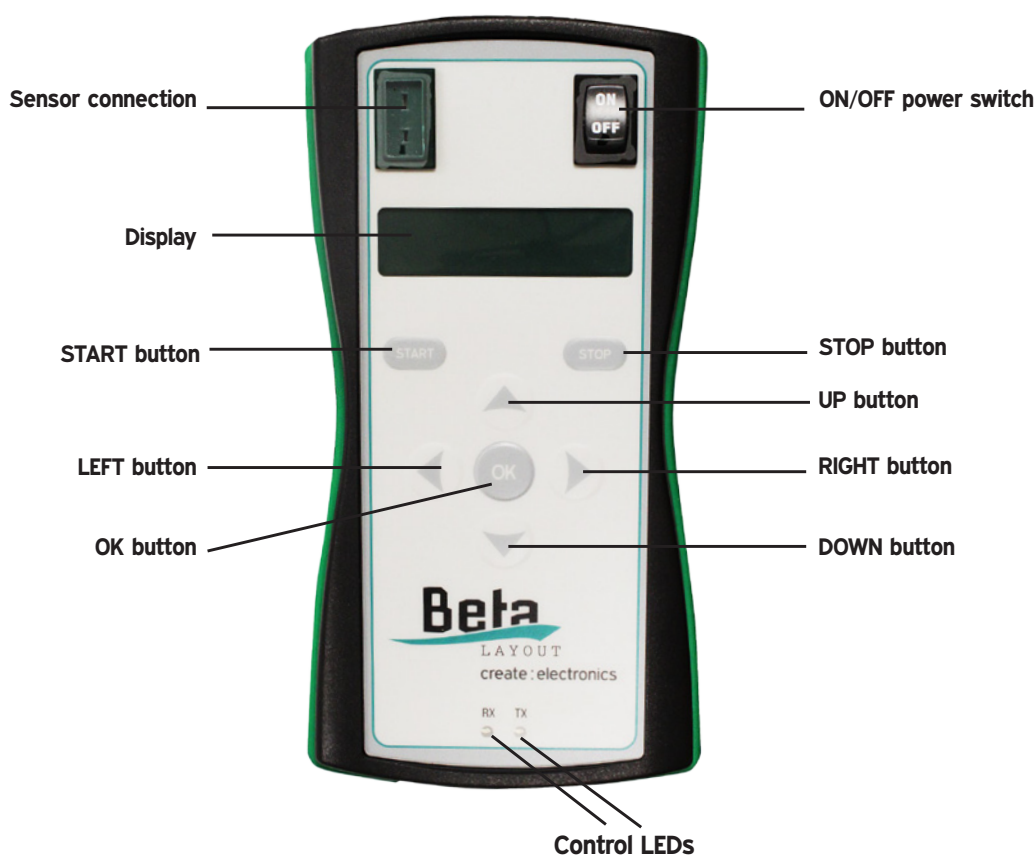

The display shows information on the current soldering process, as well as error messages.



**REFLOW-KIT®**  
Beta LAYOUT

## Operating elements

### ON/OFF power switch

The reflow controller can be switched on and off using the power switch. We recommend that you end the current soldering process before switching off the power, or alternatively, interrupt it using the STOP button

### START button

Starts the soldering process. When the controller is first started, START initiates the learn function for the oven.

### STOP button

Interrupts the current soldering process.

### OK button

Confirms previous settings and also brings you to the settings menu.

### UP button

Increases setting values and also brings you to the previous item in a menu.

### DOWN button

Decreases setting values and also brings you to the next item in a menu.

### RIGHT button

Selects the next element at the same menu level.

### LEFT button

Selects the previous element at the same menu level.


## Display elements

### Control LEDs

The LEDs display the data traffic on a connected PC. If no PC is connected, the LEDs are not significant.

### Display

The display shows all relevant information regarding your reflow controller. It is structured as follows:

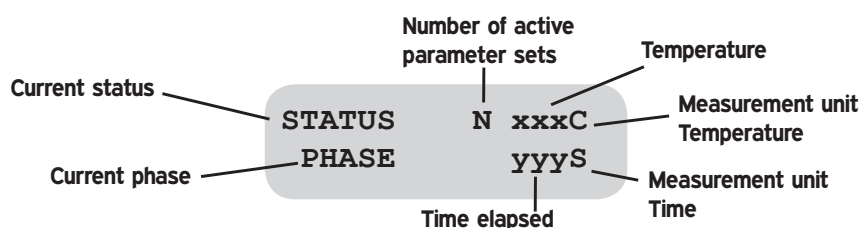





**REFLOW-KIT®**  
Beta LAYOUT

## 6 Self-test

When the controller is switched on, it runs a system test.

### • Display test

The version number of the software will appear on the screen for around one second. Please have this number ready in the event of any support queries.

### • Sensor test

A temperature sensor check is done to determine whether a sensor is attached and if so, to ensure it is isolated from the mains.

If no sensor is found or the sensor is giving an error message, the display will show the status "Error" followed by "Sensor".

If this error is displayed, please check the sensor and ensure it is attached correctly. The error message will disappear as soon as the controller finds a correctly attached sensor.

### • Buzzer test

The acoustic alarm is activated for one second.

The first time the controller is switched on or following a software update, the error message 'Learn' will be displayed after the self-test.

This indicates that the controller has not yet learned the oven characteristics and is not ready for operation. A learn cycle must be carried out.

<b>Error</b>	<b>xxx°C</b>
<b>Learn</b>	

## 7 Operating modes/soldering

### 7.1 Appropriate oven

Please note that specific characteristics must be set for every oven type. In general, the following capacity limits apply for reflow ovens:

Europe: 220..240 V~ / 8 A, 50 Hz  
USA: 110 V~ / 15 A, 60 Hz

Maximum power consumption: 1500 W

Higher oven capacity than the above is not supported and will destroy the controller.



**REFLOW-KIT®**  
Beta LAYOUT

Please note that the oven must be able to build up to the temperature required for the soldering process. If the oven capacity is too low, it heats too slowly and this may expose the components to more thermal stress.

Please note the maximum temperature resistance of the sensor.

Note on using fan (convection) ovens:

Fan ovens should not be used because when the heat and fan functions are controlled simultaneously, the resulting air movement causes 'hot spots' in the oven, which can lead to significant temperature fluctuations.


## 7.2. Preparing the oven

Before you start soldering, you must prepare the oven and the temperature sensor.

- Connect the supplied sensor to the reflow controller, taking care to maintain correct polarity.
- Run the sensor cable into the soldering area of the oven.
- Secure the sensor in such a way that the end of it is as close as possible to the soldering material.

### TIP

Attach the temperature sensor to a segment of board using a wire and place it alongside the board to be soldered. The board segment should have specifications identical to the board to be soldered.

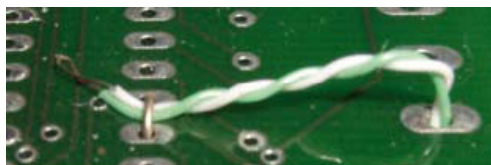

The sensor supplied is heat-resistant up to 260 °C (500 °F). Please ensure that your oven does not exceed the above temperature. Please ensure also that the sensor cable does not come in contact with oven parts that may be hotter than 260 °C.

- Connect the mains plug of your reflow oven to the controller socket.
- Switch your reflow oven to the highest heat capacity.
- Switch the upper and lower heat on and slide the grill into the middle of the oven.
- Switch the oven temperature regulator to the highest setting.
- Set the oven timer to > 30 minutes. The oven should not be preheated



**REFLOW-KIT®**  
Beta LAYOUT

## 7.3 Learning the oven characteristics

Before the oven can be used for soldering, the controller has to learn its heat and temperature characteristics.

This is necessary before first use and after every software update at least.

The learned values are stored in the controller and used for all subsequent soldering processes. However, you can repeat the learn process as often as you wish.

The controller always uses the results of the most recent learn event.

The message "Error learn" on the display indicates that the learn phase has to be run and the controller is not yet ready for soldering.

When you see this message, start the learn process by pressing START.

You can also start the learn phase at a later time, as follows:

- Connect the oven and temperature sensor according to the instructions and switch on the controller.
- After the self-test, please wait until the oven is heated to a just below 50 °C.
- Now press OK once and the message "Setup" will appear on the display. Press OK again and press "Down" while the message "Setup" is still present (around 2 seconds).

"Learn" will now appear in the bottom line of the display. Press OK to start the learn process. Please wait until the learn process is fully complete and do not interrupt it. The controller is only ready to use when the learn process is complete and the oven is at just below 50 °C.

- The learn process requires a board to be placed in the oven and the temperature sensor positioned under or over the board in such a way that they make contact with each other. This will ensure that the temperature sensor measures the board temperature and not the air temperature.
- Close the oven and start the learn process as described above.



During the learn process, the "Learn" status is displayed, with information on each phase of the process.



**REFLOW-KIT®**  
Beta LAYOUT

The oven is now heated to 100 °C. Once it reaches this temperature, the heat is switched off. The controller now measures how much more the oven will heat despite the heat being off.

A beep signals the end of the learn process and the display indicates the "Cooling" phase.

- The oven door can now be opened.

The controller has now calculated and stored the oven's characteristics.

When the oven has cooled to below 50 °C, it is ready for reflow soldering.

## 7.4 Reflow soldering

The reflow controller works by taking control of the oven. It uses one of 5 possible parameter sets for the reflow process.

In this way, you can define parameter sets for different soldering processes. Please select the required parameter set before starting the soldering process.

Chapter 9, "Setting parameters via the computer", contains further information on how to change the active parameter set.

The number of the currently selected parameter set is shown on the display.

**Ready**      **2 125C**

The soldering process can only be started when the reflow oven has been heated to < 50 °C. If you want to solder several boards in quick succession, the oven temperature must drop to below 50 °C between each soldering operation.

To solder the board, position it in the middle of the grill. Place the temperature sensor under or over the board in such a way that it makes contact with the board. This ensures that the sensor will calculate the board temperature and not the air temperature. Close the oven door and check again that the temperature sensor has not slipped away from the board.

Press START to begin the automatic soldering process.

**Solder**      **2 320F**  
**Soak**      **20S**



# REFLOW-KIT®

Beta LAYOUT

Information on each soldering phase is shown on the display, as follows:

Operating mode	<b>Solder</b>	Indicates that a soldering operation is in process.
Active phase	<b>Preheat</b>	Heats the oven slowly and keeps the temperature constant for a period of time.
	<b>Soak</b>	Activates the solder paste. Continues to heat slowly until the solder paste is just below melting point.
	<b>Reflow</b>	Continues to heat fast until the solder paste reaches melting point.
	<b>Dwell</b>	Maintains the temperature just over the melting point of the solder paste.
	<b>Cooling</b>	Cools the reflow oven. You can now open the door. The soldering process is complete and the soldered material can be removed from the oven.
Active parameter set	<b>0 ... 4</b>	Number of the active parameter set
Temperature in oven	<b>xxx</b>	Measured oven temperature in the set measurement unit
C measurement unit:	<b>C</b>	Temperature is displayed in Celsius °C
F measurement unit:	<b>F</b>	Temperature is displayed in Fahrenheit °F
Duration of phase		Elapsed time of the current phase in seconds

When the soldering process is complete, "Cooling" is displayed as the active phase and the controller beeps. The oven door must now be opened to allow the oven to cool rapidly.



**Warning:** The board is still hot.

The automatic soldering process can only be activated when the controller has learned the oven characteristics at least once.



**REFLOW-KIT<sup>®</sup>**  
Beta LAYOUT

 
## 8 Setting parameters via the display

In general, there are two ways to set parameters in the controller: via the integrated keyboard or via a connected PC. This chapter explains how to set parameters via the integrated keyboard.

### 8.1 Switching the controller to parameterisation mode

The controller is switched to parameterisation mode as follows:

- Press OK and "Setup" will appear in the display

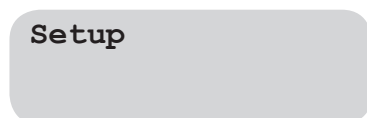


- Release OK and the display will remain the same.
- Press OK again within 3 seconds and hold for five seconds. A dash will appear in the top line for every second that has elapsed.



- After the fifth dash, the controller switches to "Setup" mode.



You can now switch between menu items using the UP and DOWN buttons. The next chapter contains details on the menu layout.

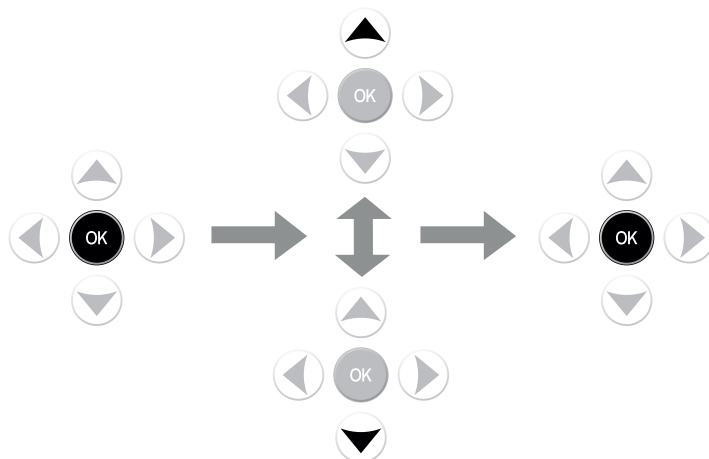



**REFLOW-KIT®**  
Beta LAYOUT

## 8.2 Menu layout

The controller has three different menus.

### Main menu

When the controller is switched on, you are in the main menu. From the main menu, you can start a soldering process or a learn cycle.

### Settings

You can go to the "Settings" menu by switching the controller to parameterisation mode (see previous chapter). In this menu, you can make all the parameter changes necessary for your soldering process.

### Base values

You can get to the "Base values" menu via the "Settings" menu. In the "Base values" menu, you can adapt controller performance to your own requirements. Aside from the initial setup, no changes are usually required in this menu.

## 8.3 Main menu

The main menu contains the following menu items:

- Ready** "Normal" controller operation.  
Pressing START will initiate a soldering cycle.
- Setup** Entry point to the "Settings" menu. See chapter "Switching the controller to parameterisation model" for further information.
- Learn** Initiates a learn cycle. Press START to begin a cycle. See chapter "Learning the oven characteristics" for further information on the learn procedure and how to use it.

## 8.4 "Settings" menu

You are in the "Settings" menu when the status "Setup" appears in the first line of the display and the current menu item is on the second line.

**Setup**  
**Preheat**

The "Settings" menu contains the following menu items:

- Ready** Menu exit point. Press OK to return to the main menu.
- Profile** Active parameter set selection



**REFLOW-KIT®**  
Beta LAYOUT

**Preheat** "Preheat" phase settings for the active parameter set

**Soak** "Soak" phase settings for the active parameter set

**Reflow** "Reflow" phase settings for the active parameter set

**Dwell** "Dwell" phase settings for the active parameter set

**Base values** Entry point to the "Base values" menu.  
Press OK to access the "Base values" menu.

You can use UP or DOWN to navigate to the last or next menu item, respectively. If you want to change the settings in a menu item, scroll to the item using UP/DOWN, then press OK.


### 8.4.1 Profiles

You can use this menu item to activate one of the five parameter sets stored in the device, as follows:

- Select the menu item "Profiles" in the "Settings" menu. See chapter "Settings" for more information. When "Profiles" is selected, the number of the active profile will be displayed in the bottom line.

**Setup**  
**Profile 0001**

- Pressing OK will activate the menu item and the number of the active parameter set will start to flash.
- You can change the value as required using the UP and DOWN buttons.
- Press OK to confirm.

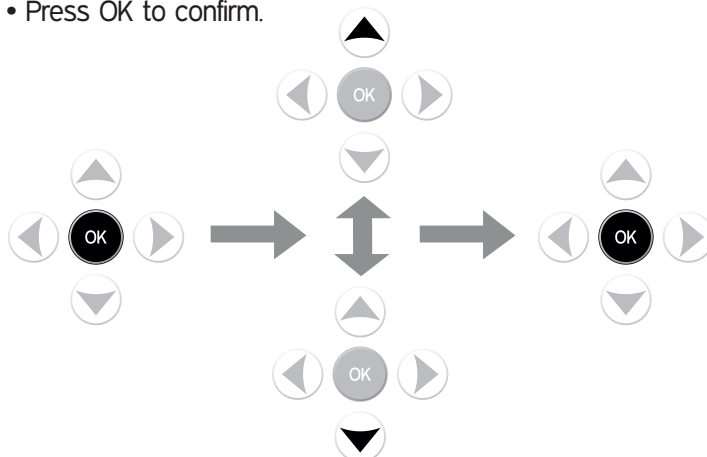






**REFLOW-KIT®**  
Beta LAYOUT

## 8.4.2 Using the parameters

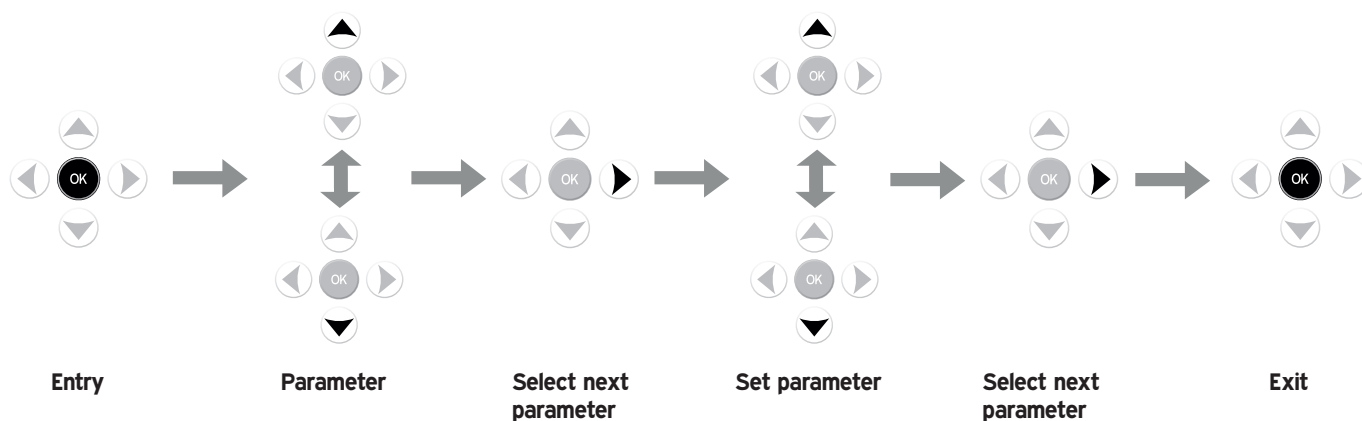

When you have set all the parameters as required, press OK to confirm the settings. Please note that pressing OK always ends parameter input, even if not all parameters have yet been changed. You are now back in the "Settings" menu.

## 8.4.3 Preheat

This menu item allows you to change the parameters for the "Preheat" phase. The parameters are as follows:

- Duration of the phase in seconds
- Required end temperature of the phase in the specified temperature unit
- Oven capacity during the phase in %

Please note that the settings always affect the currently active parameter set. Information on switching the active parameter set can be found in the chapter "Profiles".

You can set the 'Preheat' parameters as follows:

- Select the menu item "Preheat" in the "Settings" menu.  
The chapter "Settings" contains further details. In the menu item "Preheat", the number of the active parameter set is also displayed in the first line.

**Setup**      4  
**Preheat**

- Pressing OK will activate the menu item. You will now see the name of the activated menu item (Preheat) and the number of the current parameter set on the display. The second line shows the name of the selected parameter to be changed and its current value, which will flash onscreen.  
This means that the value can be changed using UP/DOWN.



**REFLOW-KIT<sup>®</sup>**  
Beta LAYOUT

**Preheat**      4  
**temp:**        0125C

- Set parameters.
- Then select the next parameter using the LEFT or RIGHT button and make the change.
- When you have set all the "Preheat" parameters, you can end parameter input by pressing OK.

Please note that pressing OK always ends parameter input, even if not all parameters have yet been changed. You are now back in the "Settings" menu.

## 8.4.4 Soak

This menu item allows you to change the parameters for the "Soak" phase. The parameters are as follows:

- Duration of the phase in seconds
- Required end temperature of the phase in the specified temperature unit
- Oven performance during the phase in %

Please note that the settings always affect the currently active parameter set. Information on switching the active parameter set can be found in the chapter "Profiles".

You can set the "Soak" parameters as follows:

- Select the menu item "Soak" in the "Settings" menu.  
The chapter "Settings" contains further details. In the menu item "Soak", the number of the active parameter set is also displayed in the first line.

**Setup**        2  
**Soak**

- Pressing OK will activate the menu item. You will now see the name of the activated menu item (Soak) and the number of the current parameter set on the display. The second line shows the name of the selected parameter to be changed and its current value, which will flash onscreen.  
This means that the value can be changed using UP/DOWN.

**Soak**        2  
**time:**       0090s

- Set parameters.



**REFLOW-KIT<sup>®</sup>**  
Beta LAYOUT

- Then select the next parameter using the LEFT or RIGHT button and make the change.
- When you have set all the "Soak" parameters, you can end parameter input by pressing OK.  
Please note that pressing OK always ends parameter input, even if not all parameters have yet been changed. You are now back in the "Settings" menu.

### 8.4.5 Reflow

This menu item allows you to change the parameters for the "Reflow" phase.  
The parameters are as follows:

- Duration of the phase in seconds
- Required end temperature of the phase in the specified temperature unit
- Oven performance during the phase in %

Please note that the settings always affect the currently active parameter set. Information on switching the active parameter set can be found in the chapter "Profiles".

You can set the "Reflow" parameters as follows:

- Select the menu item "Reflow" in the "Settings" menu.  
The chapter 'Settings' contains further details. In the menu item "Reflow", the number of the active parameter set is also displayed in the first line.

**Setup**      **2**  
**Reflow**

- Pressing OK will activate the menu item. You will now see the name of the activated menu item (Reflow) and the number of the current parameter set on the display. The second line shows the name of the selected parameter to be changed and its current value, which will flash onscreen. This means that the value can be changed using UP/DOWN.

**Reflow**      **2**  
**power:**      **080%**

- Set parameters.
- Then select the next parameter using the LEFT or RIGHT button and make the change.
- When you have set all the "Reflow" parameters, you can end parameter input by pressing OK.

Please note that pressing OK always ends parameter input, even if not all parameters have yet been changed. You are now back in the "Settings" menu.


**REFLOW-KIT®**  
Beta LAYOUT

## 8.4.6 Dwell

This menu item allows you to change the parameters for the "Dwell" phase. The parameters are as follows:

- Duration of the phase in seconds
- Required end temperature of the phase in the specified temperature unit
- Oven performance during the phase in %

Please note that the settings always affect the currently active parameter set. Information on switching the active parameter set can be found in the chapter "Profiles".

You can set the "Dwell" parameters as follows:

- Select the menu item "Dwell" in the "Settings" menu.  
The chapter "Settings" contains further details. In the menu item "Dwell", the number of the active parameter set is also displayed in the first line.

**Setup     1**  
**Dwell**

- Pressing OK will activate the menu item. You will now see the name of the activated menu item (Reflow) and the number of the current parameter set on the display. The second line shows the name of the selected parameter to be changed and its current value, which will flash onscreen.  
This means that the value can be changed using UP/DOWN.

**Dwell     1**  
**power:     070%**

- Set parameters.
- Then select the next parameter using the LEFT or RIGHT button and make the change.
- When you have set all the "Dwell" parameters, you can end parameter input by pressing OK.  
Please note that pressing OK always ends parameter input, even if not all parameters have yet been changed. You are now back in the "Settings" menu.

## 8.5 "Base values" menu

You can get to the "Base values" menu by switching the controller to parameterisation mode (see chapter "Switching the controller to parameterisation mode") and activating

**REFLOW-KIT®**  
Beta LAYOUT

the menu item "Base values" in the "Settings" menu (see chapter "Settings"). You are in the "Base values" menu when you can see the status "Base values" in the first line of the display and the current menu item in the second line.

**Base Values**  
**Ready**

The "Base values" menu contains the following menu items:

<b>Ready</b>	Menu exit point. Press OK to return to the main menu.
<b>Autoextend</b>	Automatic phase extension On/Off
<b>TempOffset</b>	Temperature calibration/Sensor error adjustment
<b>TempUnit</b>	Temperature unit settings °C / °F
<b>Factory Default</b>	Resets all values to default

You can use UP or DOWN to navigate to the last or next menu item, respectively. If you want to change the settings in a menu item, scroll to the item using UP/DOWN, then press OK.

## 8.5.1 Automatic phase extension

Automatic phase extension involves extending a soldering phase beyond the set phase duration if the target temperature was not reached in the set time.

This is necessary if, for example, you are not familiar with the heat performance of the oven and first want to test how long it takes for the oven to reach the target temperature using the specified performance settings. You can switch the "Autoextend" function on or off.

**Autoextend ON:**

This allows a soldering phase to be extended until the oven is heated to the set end temperature for that phase. If the end temperature is reached within the given time, the phase is not extended.

**AutoExtend OFF:**

When the set phase duration is complete, the next phase starts regardless of whether the phase end temperature was reached.

You can change the "Autoextend" function as follows:

- Go the "Base values" menu (see chapter "Base values").
- Select the menu item "Autoextend". The current setting is shown in the display.



**REFLOW-KIT®**  
Beta LAYOUT

**Base Values**  
**Autoextend**    **OFF**

- Pressing OK will activate the menu item and the text showing the current setting will start to flash.
- The UP and DOWN buttons can be used to change the value as required.
- Press OK to confirm.

## 8.5.2 Temperature calibration


The temperature sensor for the reflow controller is preset and generally does not need to be calibrated. However, if required, the reflow controller can be synchronised with the sensor.

You can set temperature calibration as follows:

- Go to the "Base values" menu (see chapter "Base values").
- Select the menu item "TempOffset". The display shows the current setting of this value in the selected temperature unit.

**Base Values**  
**TempOffset**    **10F**

- Pressing OK will activate the menu item and the value to be adjusted will start to flash.
- The UP and DOWN buttons can be used to change the value as required.  
Press OK to confirm.

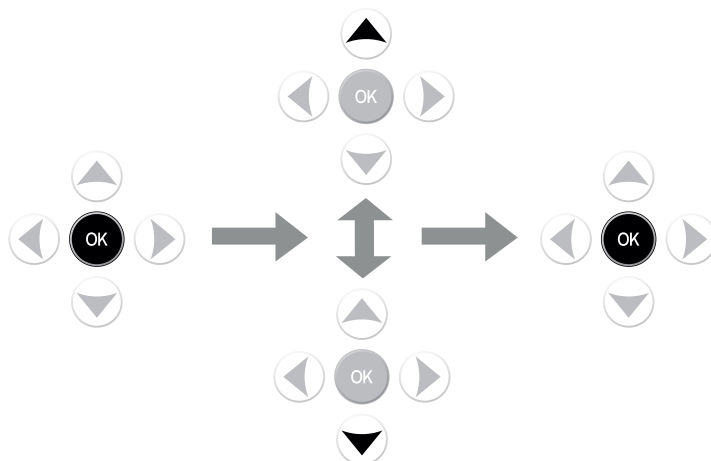

User diagram for sections 8.5.1 "Automatic phase extension" and 8.5.2 "Temperature calibration"



**REFLOW-KIT®**  
Beta LAYOUT

### 8.5.3 Setting the measurement unit "Temperature"

You can set the measurement unit for the temperature in your reflow controller by selecting one of the following:

- C:** Temperature unit °C (Celsius)
- F:** Temperature unit °F (Fahrenheit)

Please note that when you switch temperature units, the change only happens in the display. Internally, the controller always calculates in °C. This ensures that your temperature profiles and settings will not be corrupted when you change temperature units.

The temperature measurement unit can be changed as follows:

- Go the "Base values" menu (see chapter "Base values").
- Select the menu item "TempUnit". The current value for this setting is shown in the display. The symbols "F" and "C" stand for Fahrenheit ° F and Celsius ° C, respectively.
- Pressing OK will activate the menu item and the temperature unit symbol will start to flash.
- The UP and DOWN buttons can be used to change the value as required. Press OK to confirm.

### 8.5.4 Setting the background brightness

The display brightness of your reflow controller can be adapted to individual requirements. There are 11 levels of brightness, from

- 0** Display brightness off
- to
- 10** Maximum display brightness

The **default value** is 5. Please note that if the brightness level is too high, users may have difficulty reading the display.

Background brightness can be changed as follows:

- Go to the "Base values" menu (see chapter "Base values").
- Select the menu item "Backlight". The current value for this setting will be shown in the display.

**Base Values**  
**Backlight**     0005



**REFLOW-KIT®**  
Beta LAYOUT

- Pressing OK will activate the menu item and the current brightness value will start to flash.
- You can change the value as required using the UP and DOWN buttons. The change to the brightness level takes effect immediately and the display will change to the new setting.
- Press OK to confirm.

### 8.5.5 Restoring default values

This menu item is used to reset all controller settings to the factory default, as follows:

- Go to the "Base values" menu (see chapter "Base values").
- Select the menu item "Factory Default".

**Base Values**  
**Factory Default**

- Pressing OK will activate the menu item and a security question will appear on the display.

**Factory Default**  
**OK to Reset**

- Pressing OK will reset the values. Pressing UP will deactivate the menu item and the values will not be reset.

## 9 Setting parameters via the computer

### 9.1 Connecting to the computer

The reflow controller has a USB port which enables it to be connected to a PC or Notebook.

You can also update the reflow controller software via the USB port.

When you attach the USB cable, a new serial interface will be available. Further details can be found in the section on the USB driver.

You can set controller parameters using this serial interface in the same way as using the display. Other data such as status and diagnostic information can also be output and logged for quality assurance purposes.



**REFLOW-KIT<sup>®</sup>**  
Beta LAYOUT

## 9.2 Installing the USB driver

Depending on the operating system, it may be necessary to install driver software. The reflow controller uses a standard FTDI USB serial converter chip.


An up-to-date LINUX system does not require a driver as it will recognise the USB chip and allocate a port `/dev/ttyUSB0`. If you already have another USB serial converter in your system, the multiplexer will connect to port `/dev/ttyUSB1` or port `/dev/ttyUSB2`.

Driver software may need to be installed on a Windows system. Drivers for this chip are available on **[www.beta-eSTORE.com/RKCV3](http://www.beta-eSTORE.com/RKCV3)** and on the website of the FTDI manufacturer (<http://www.ftdichip.com/FTDrivers.htm>). If you have a different device on your PC with an FTDI USB serial chip, the driver is already available. The most recent Windows systems include the driver in the installation.

Alternatively, you can download the driver from the manufacturer's home page and configure it according to the installation instructions.

When the driver has been installed successfully, the operating system automatically assigns a virtual serial interface (COM port) to the USB. You can control this in the device manager and also modify the serial interface number as required. You will find the settings for your virtual port in the device manager under "Ports (COM & LPT)".

### COM port allocation

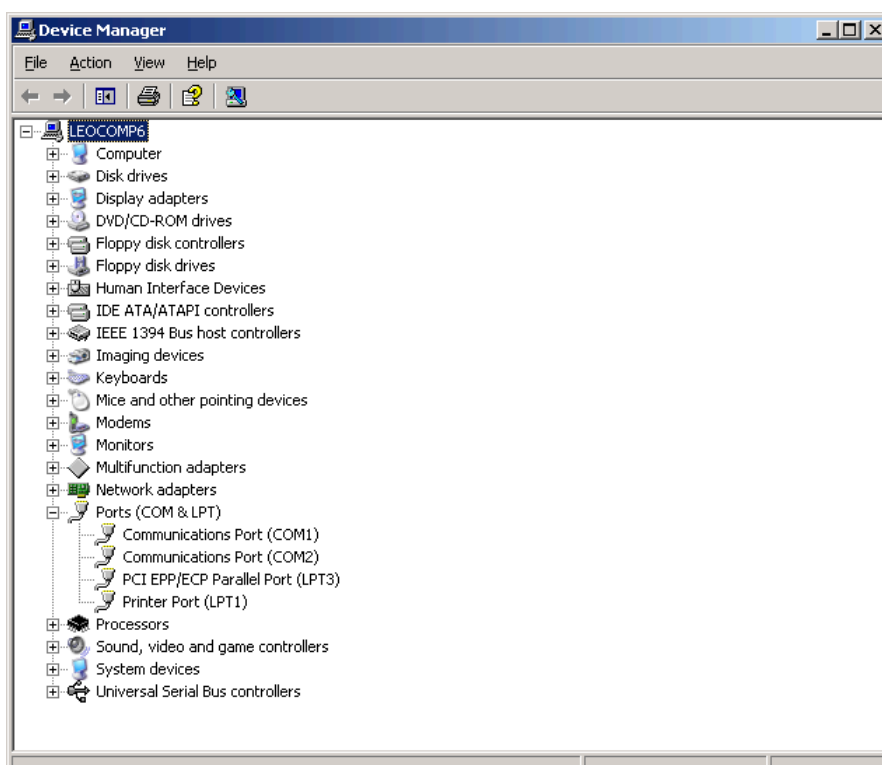



**REFLOW-KIT®**  
Beta LAYOUT

Please note the following:

To make software updates easier, the USB chip uses voltage from the connected computer.

This means that the device is attached to your computer as soon as you connect the USB cable, regardless of whether or not the reflow controller is connected to the mains.

The virtual COM port will remain in place for as long as the connection to the controller is physically available, regardless of whether or not the reflow controller is connected to the mains.

Data communication from the PC to the controller is only possible when the controller is also switched on.

If you wish to connect the reflow controller to various USB ports on your computer, the operating system must carry out a new driver installation each time and assign a new virtual COM port if necessary.

This is a feature of Windows operating systems which we cannot control. To make it less inconvenient, we recommend that you always connect the controller to the same USB socket or alternatively, use a different operating system.

In Linux operating systems, the virtual port is always on `/dev/ttyUSB0`, or if you are using other devices, on the next 'free' `ttyUSB`. This is the case regardless of what USB port you are using on your computer.

## 9.3 Interface parameters

To communicate with the reflow controller, set the following parameters for your terminal program:

- 9600 baud
- 8 data bits
- no parity
- 1 stop bit
- no handshake.

## 9.4 Terminal program

You can use any terminal program to communicate with the controller.

See below for examples of suitable terminal programs that are free of charge:

Windows: Hyperterminal

Linux: Miniterm



**REFLOW-KIT®**  
Beta LAYOUT

## 9.5 Communication test

Connect the controller to the computer as described above, start your terminal program and then switch on the controller.

When the controller has been successfully connected to your PC, you will see the start-up message below.

```
>Reflow Controller
Software Date : Jun 20 2013
Software Time : 20:15:59
selftest Start
selftest Ready
Type "help" for command list.
```

You can now manage the controller via the serial interface. You can also do this at any time using the integrated keyboard, even if your PC is still connected.



**REFLOW-KIT®**  
Beta LAYOUT

## 9.6 General commands

You can use the following commands via the PC interface:

Command	Parameter	Definition
<b>help</b>		Lists all commands
<b>tempshow</b>	[0..254]	<p>The measured temperature is displayed continually at second intervals specified by the parameter:</p> <p><b>tempshow 5&lt;enter&gt;</b>  displays the current temperature every 5 seconds.</p> <p><b>tempshow 0&lt;enter&gt;</b>  switches off temperature display.</p> <p><b>tempshow&lt;enter&gt;</b>  displays the current temperature once.</p> <p>The display format is as follows:  <b>phase, seconds, +xxx, unit</b></p> <p>Example:  <b>Off, 31, +058, C</b> or  <b>Off, 31, +136, F</b></p> <p>The data elements are separated with a comma. If you store the data sets in your terminal program, they can then be entered easily as .csv (comma-separated values) into table processing programs such as Open Office.</p> <p>If the command has no parameters, the current temperature is only displayed once.</p>
<b>temptrace</b>	[0..254]	<p>The measured temperature is displayed at second intervals specified by the parameter but only during a soldering process. Otherwise this command is the same as "tempshow".</p>
<b>debug</b>	[0..1]	<p>Display internal debug information</p> <p><b>debug 1&lt;enter&gt;</b>  Switch on debug information</p> <p><b>debug 0&lt;enter&gt;</b></p> <p>The form and content of status messages may change in the case of program updates.</p>



## REFLOW-KIT®

Beta LAYOUT

Command	Parameter	Definition
<b>trace</b>	[0..1]	Display internal status messages  <b>trace 1&lt;enter&gt;</b> Switch on status message display  <b>trace 0&lt;enter&gt;</b> Switch off status message display  The form and content of status messages may change in the case of program updates.
<b>tempUnit</b>		Setting the temperature unit  <b>tempUnit C&lt;enter&gt;</b> Temperature unit is °C  <b>tempUnit F&lt;enter&gt;</b> Temperature unit is °F  If the temperature unit is changed, the stored temperature profiles are kept, i.e., changing the temperature unit will not change the temperature status or soldering result.
<b>bLight</b>	[0..10]	Setting the display background brightness.  <b>bLight 5&lt;enter&gt;</b> sets brightness to medium.  The value "0" switches off brightness.
<b>showall</b>		Lists all set parameters.
<b>settings</b>	[0..4]	Selects a parameter set as active. All soldering operations will be carried out using those parameters.  <b>settings 3&lt;enter&gt;</b> All soldering operations will be carried out using the stored parameter set 3.
<b>doStart</b>		Equivalent to START
<b>doStop</b>		Equivalent to STOP
<b>doOk</b>		Equivalent to OK
<b>doLeft</b>		Equivalent to LEFT
<b>doRight</b>		Equivalent to RIGHT
<b>doUp</b>		Equivalent to UP
<b>doDown</b>		Equivalent to DOWN



**REFLOW-KIT®**  
Beta LAYOUT

## 9.7 Commands for parameter setting and calibration

The reflow controller can be set for different solder pastes, different temperature sensors and different oven types. The parameters necessary to make those settings are input via the computer interface.

Please ensure that all settings relate to the parameter set currently in use. You can store up to 5 different settings (parameter sets) in the controller. In the case of all commands, if the command has no parameters, the controller will display the value currently set.

Command	Parameter	Definition
<b>phttemp</b>	[0 .. 254] °C [32 .. 490] F	End temperature of the preheat phase  <b>phttemp 125&lt;ENTER&gt;</b> sets the temperature to 125 °C.
<b>phttime</b>	[0 .. 65534] Sek.	Duration of the preheat phase  If the parameter is set to 0, the controller itself will define the duration of the "Preheat" phase. The oven will be operated at the set capacity until the preset temperature has been reached.  <b>phttime 180&lt;ENTER&gt;</b> sets the duration to 180 seconds.
<b>phtpwr</b>	[0 .. 100] %	Heat capacity of the preheat phase  <b>phtpwr 60&lt;ENTER&gt;</b> Oven will operate at 60 % heat capacity.
<b>soaktemp</b>	[0 .. 254] °C [32 .. 490] F	End temperature of the activation or soak phase  <b>soaktemp 175&lt;ENTER&gt;</b> sets the temperature to 175 °C.
<b>soaktime</b>	[0 .. 65534] Sek.	Duration of the activation phase  If the parameter is set to 0, the controller itself will define the duration of the "Soak" phase. The oven will be operated at the set capacity until the preset temperature has been reached.  <b>soaktime 90&lt;ENTER&gt;</b> sets the duration to 90 seconds.
<b>soakpwr</b>	[0 .. 100] %	Heat capacity of the activation phase  <b>soakpwr 80&lt;ENTER&gt;</b> Oven will operate at 80 % heat capacity.



# REFLOW-KIT®

Beta LAYOUT

Command	Parameter	Definition
<b>reflowtemp</b>	[0 .. 254] °C [32 .. 490] F	End temperature of the reflow phase  <b>reflowtemp 232&lt;ENTER&gt;</b> sets the temperature to 232 °C.
<b>reflowtime</b>	[0 .. 65534] Sek.	Duration of the reflow phase  If the parameter is set to 0, the controller itself will define the duration of the reflow phase. The oven will be operated at the set capacity until the preset temperature has been reached.  <b>reflowtime 140&lt;ENTER&gt;</b> sets the duration to 140 seconds.
<b>reflowpwr</b>	[0 .. 100] %	Heat capacity of the reflow phase  <b>reflowpwr 100&lt;ENTER&gt;</b> Oven will operate at 100 % heat capacity.
<b>dweltemp</b>	[0 .. 254] °C [32 .. 490] F	End temperature of the "Dwell" phase  <b>dweltemp 232&lt;ENTER&gt;</b> sets the temperature to 232 °C.
<b>dweltime</b>	[0 .. 65534] Sek.	Duration of the "Dwell" phase  If the parameter is set to 0, the controller itself defines the duration of the "Dwell" phase. The oven will be operated at the set capacity until the preset temperature has been reached.  <b>dweltime 40&lt;ENTER&gt;</b> sets the duration to 40 seconds.
<b>dwelpwr</b>	[0 .. 100] %	Heat capacity of the "Dwell" phase  <b>dwelpwr 80&lt;ENTER&gt;</b> Oven will operate at 80 % heat capacity.
<b>tempoffset</b>	[-30 .. 30] °C [-54 .. 54] F	Adjusting the temperature sensor  This setting is universal and applies to all parameter sets.  <b>tempoffset -3&lt;ENTER&gt;</b> 3 °C is deducted from the measured temperature. The temperature less 3 °C is displayed.  <b>tempoffset 5&lt;ENTER&gt;</b> 5 °C is added to the measured temperature. The temperature plus 5 °C is displayed.



**REFLOW-KIT®**  
Beta LAYOUT

Command	Parameter	Definition
<b>autoextend</b>	[0 .. 1]	<p>Controlling automatic soldering phase extension</p> <p><b>autoextend 1&lt;enter&gt;</b>  Switch on automatic soldering phase extension.</p> <p>If the preselected end temperature for this phase has not been reached in the set time, the phase will be extended until the set temperature has been reached.</p> <p><b>autoextend 0&lt;enter&gt;</b>  Switch off automatic soldering phase extension.</p> <p>When the set phase duration is complete, the next phase will start regardless of whether the preset temperature for the phase was reached.</p> <p>This parameter is universal and applies to all solder curves.</p>
<b>mta</b>	[0 ... 65534]	<p>Controlling oven monitoring</p> <p><b>mta 0&lt;enter&gt;</b>  Switch off automatic oven monitoring.</p> <p><b>mta X&lt;enter&gt;</b>  X&gt;0 Switch on automatic oven monitoring.</p> <p>This command checks that the oven temperature has reached a level of at least <math>X * 0.25 \text{ }^{\circ}\text{C}</math> within 15 seconds. If this is not the case (e.g., due to a defective oven or the oven door not being closed fully), the soldering process is terminated and an error message displayed.</p>

## 9.8 Manual operation

The operating mode "Manual operation" can only be controlled via the PC.

In effect, this operating mode allows you full access to the controller, which means you can write your own controller programs on the PC.

You can also devise special profiles or applications, for example, "managed cooling" of sintered tools.

When the controller is in "Manual" mode, the message "Manual" will be shown in the display line, along with the current temperature.





**REFLOW-KIT®**  
Beta LAYOUT

The "Pulse" phase will appear in the last line of the display. In "Manual" mode, it is not possible to use the keyboard or carry out normal soldering functions.

<b>Manual</b>	<b>75F</b>
<b>Puls</b>	

When a heat pulse is now released via the interface, the pulse capacity is displayed simultaneously for exactly one second; so for example, a 50% pulse would be displayed as follows:

<b>Manual</b>	<b>75F</b>
<b>Puls</b>	<b>50%</b>

In "Manual" mode, you can release single heat pulses via the serial interface using the command "shot X", where X indicates the required capacity in %.

A heat pulse always lasts for a second. You can use the parameter "Capacity" to determine for how long the heat is actually switched on during a heat impulse.

#### Example:

shot 10 --> 10 % capacity for 1 second --> Heating is on for 100 ms and off for 900 ms  
shot 25 --> 25 % capacity for 1 second --> Heating is on for 250 ms and off for 750 ms

At the end of a heat pulse, the measured temperature is displayed via the interface in the format "shot, seconds, +xxx, unit".

#### Example:

**shot, 31, +058, C** bzw.  
**shot, 31, +136, F**

A period of 31 seconds has elapsed since the controller was switched on and the temperature measured was 58 °C. Data elements are separated by a comma, which makes it easier to separate each value in the control program.

Please note that for safety reasons, the oven cannot be switched on permanently via the interface. Every heat pulse takes exactly a second. If the connection to the control computer is lost, the oven will switch off in a second at most.

The "Shot" command can only be used under the following circumstances:

- The controller is in "Manual" operating mode.
- A previous heat pulse is completed.



**REFLOW-KIT**<sup>®</sup>  
Beta LAYOUT

Command	Parameter	Definition
<b>Manual</b>		<p>Switch controller to manual mode</p> <p><b>Manual 0&lt;enter&gt;</b> End manual mode, controller is switched to normal mode.</p> <p><b>Manual 1&lt;enter&gt;</b> Switch controller to manual mode.</p>
<b>shot</b>	0 .. 100] %	<p>Single pulse with heat capacity X</p> <p><b>shot X&lt;ENTER&gt;</b> Release single heat pulse X%.</p> <p><b>WARNING!</b>  This command will only work if the controller has already been switched to manual mode.</p>

## 10 Software update instructions

The software can be updated via the controller's USB interface. To do this, you will need the following:

- A PC with a USB interface and Windows operating system.
- A standard USB cable.
- The software "Megaload" (available for download on [www.beta-eSTORE.com/RKCV3](http://www.beta-eSTORE.com/RKCV3)).

Thanks to Sylvain Bissonette ([www.microsylv.com](http://www.microsylv.com)), who kindly made this software available to us.

Start by unzipping the files into your designated directory.


The software can also be run directly from a host, in which case separate installation is not required.

Connect the controller to the USB port on your PC. If you have not yet configured the PC connection for the controller, please do so by following the instructions in the chapter "Setting parameters via the computer".

- Test the PC connection with an appropriate terminal program.
- Make a note of your own controller settings (parameter sets).



**REFLOW-KIT®**  
Beta LAYOUT

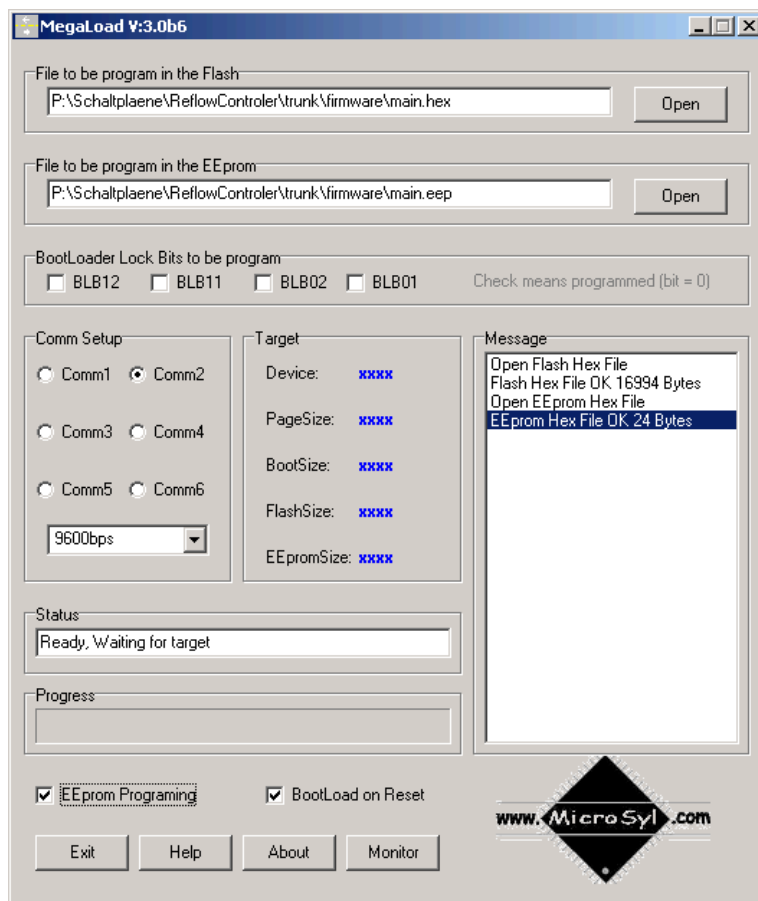

- Close the terminal program and switch the reflow controller off.
- Start the program "Megaload.exe" and the following window will open:
- Set the parameters as shown in the diagram.

Please ensure that you only use the source files provided by us.

Please ensure that the checkbox "Eeprom programming" is always ticked.

Check again that you have made a note of your own parameter settings.


Check again that you have selected the correct files for programming.

- Power on the controller and programming will commence immediately.

**It is important that you do not interrupt this process.**



**REFLOW-KIT®**  
Beta LAYOUT

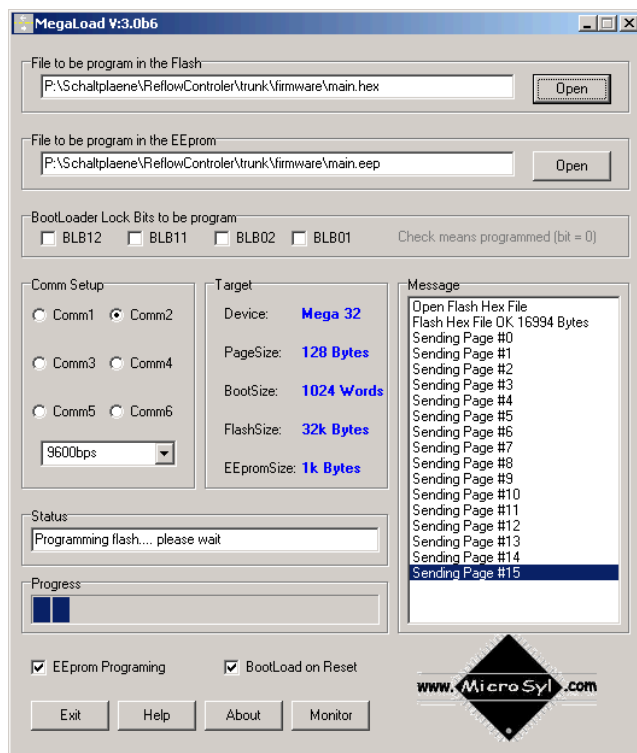

- When the programming operation is finished, the controller will carry out a self-test. The software update is then complete.

- End the program "Megaload".

NOTE: It is important to ensure that you selected appropriate source files for the controller. For example, the boot loader program can recognise that no file was selected but only after the software has been deleted in the controller

- Re-enter your selected settings.



**REFLOW-KIT®**  
Beta LAYOUT

## 11 Error messages

The following error messages were generated by the controller and displayed on the screen:

Error message	Cause	Solution
<b>"Sensor" error</b>	The attached sensor was not recognised or is faulty..	<ul style="list-style-type: none"> <li>- Connect sensor</li> <li>- Replace sensor</li> </ul>
<b>"Too Hot" error</b>	The temperature sensor has detected that the temperature is too high to start a new soldering process.	Open oven and allow to cool down
<b>"Oven" error</b>	The temperature in the oven has not reached the defined preset value.	<ul style="list-style-type: none"> <li>- Oven switched on?</li> <li>- Oven connected?</li> <li>- Oven door closed?</li> <li>- Power setting too low?</li> <li>- Minimum temperature increase incorrectly set</li> </ul>
<b>"Learn" error</b>	The oven characteristics have not yet been learned.	Start a learn procedure for the oven

## 12 Maintenance and disposal

The reflow controller is maintenance-free.

The mains fuse should only be changed by a qualified specialist and the replacement fuse should have the same technical specifications. The use of repaired fuses and the practice of bridging fuses are not permitted.

Repairs should only be carried out by an authorised specialist.

Used electronic devices are recyclable and should not be disposed of with household refuse.

The device must be disposed of at the end of its life according to the appropriate legal guidelines.

These instructions represent an accurate technical description at the time of going to press.

Subsequent changes in technology or configuration are reserved.



**REFLOW-KIT®**  
Beta LAYOUT

## 13 Guarantee

We give a one-year guarantee on this device. The guarantee covers free correction of defects that do not result from using faulty materials or from manufacturing defects (proof required). Further claims are excluded.

We offer no guarantee and accept no liability for damages or consequential damages in connection with this product. We reserve the right to repair, improve, part-deliver, or refund the purchase price.

In the following circumstances, no repair will be offered or the guarantee will be rendered null and void:

- Changes or attempted repairs to the device, or unauthorised modification of the circuitry
- Overloading the assembly components
- Damages caused by third parties
- Damages caused by failure to observe the operating instructions and connection diagram
- Connection to an inappropriate voltage or current type
- Faulty operation or damage caused by negligent handling or misuse
- Defects caused by bridged fuses or by using the wrong fuse type


**In all cases above, product return is at your own expense.**



**REFLOW-KIT<sup>®</sup>**  
Beta LAYOUT

## 14 Connecting the reflow controller to the reflow oven and PC

The reflow controller (A) is connected via a sensor (C) to the reflow oven (B) and optionally via a USB cable (D) to a PC (E). Mains power is supplied via a power cable (F). The oven is connected using an adapter cable (G).

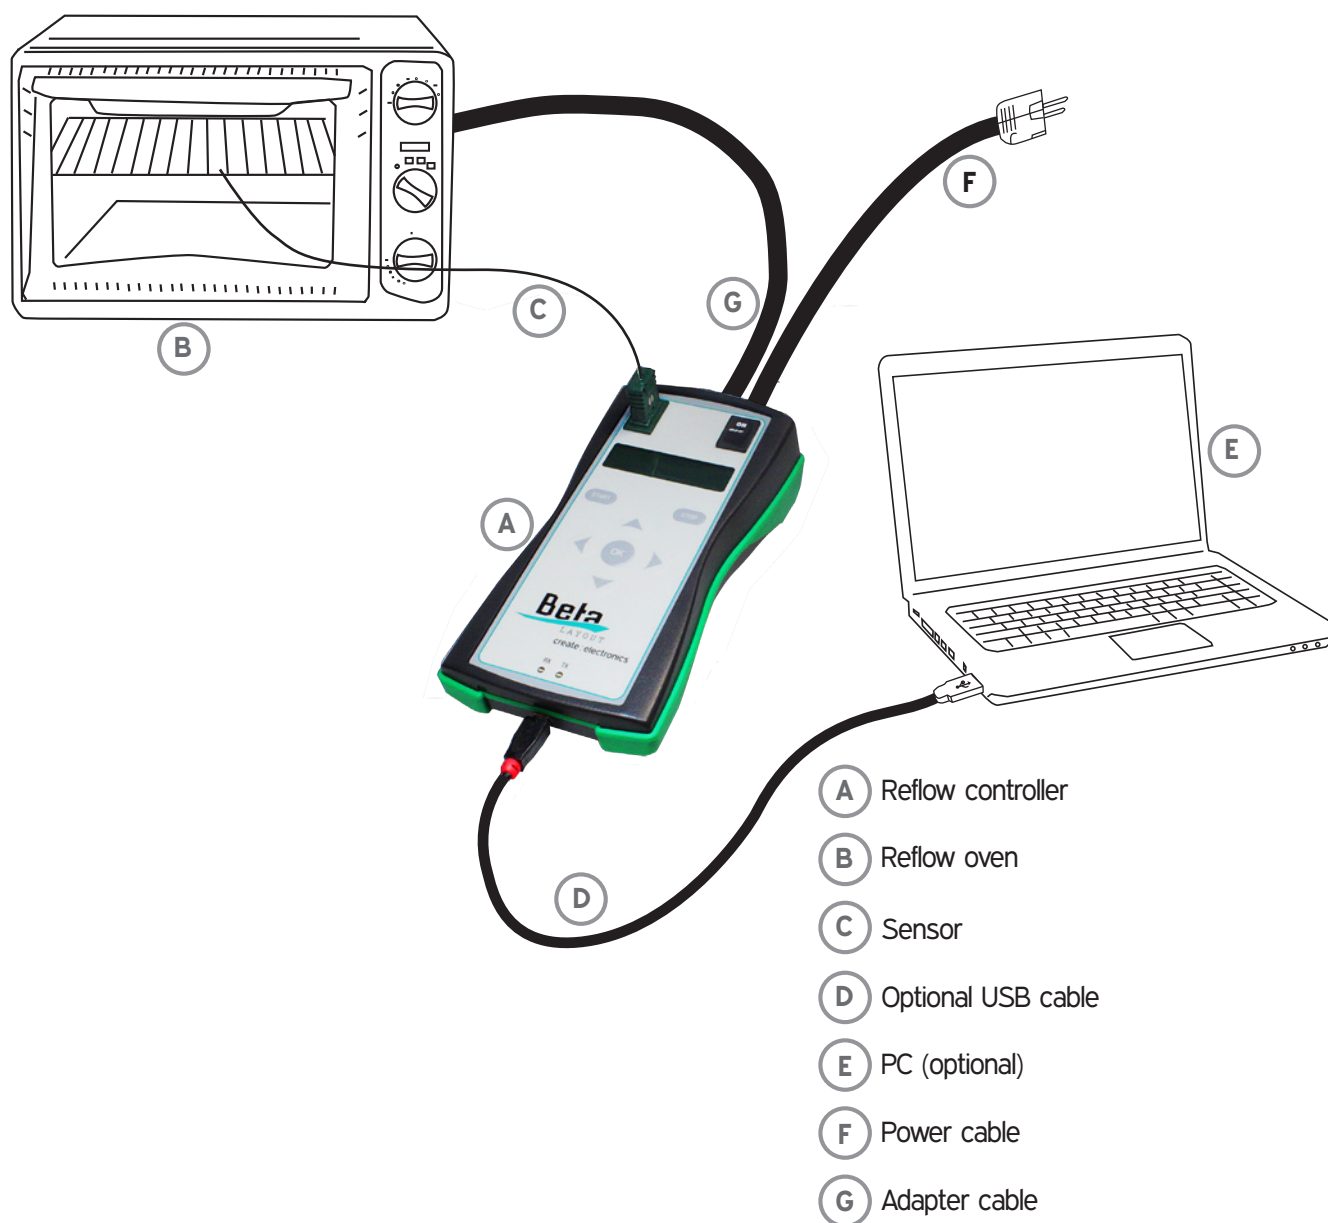



## REFLOW-KIT®

Beta LAYOUT

### Intended Use

This product can only be used to control a reflow soldering oven.

Using it for any purpose other than the above will lead to product damage, and inappropriate use is also associated with hazards such as short circuits, fire, electric shock etc. The product must not be changed or modified in any way.

This product complies with all legal, national and European requirements.

All company names and product designs are trademarks of the respective owners. All rights reserved.

Please refer to the controller operating manual, which is available for download as a pdf in the relevant product category on [www.beta-eSTORE.com/RKCV3](http://www.beta-eSTORE.com/RKCV3)

### Safety Instructions



**Any damage caused by failure to follow the operating instructions will render the guarantee/warranty null and void. We accept no liability for consequential damages. We also accept no liability for material or personal damages caused by inappropriate handling or failure to follow the safety instructions. In such cases, the warranty/guarantee is null and void.**




**• For safety and licensing reasons, unauthorised reconfiguration or modification of the product is not permitted. Never disassemble the product.**

- The product is designed for operation through the public mains supply only (230V~/50Hz) and must be properly earthed. Plug the controller into a regulation-compliant earth socket.
- This product is not a toy and is not intended for use by children. Operate and store the product out of children's reach. Children may attempt to insert objects into the openings of the unit, risking fatal electric shock.
- The product is only suited to dry indoor areas and must not get damp or wet. Never use the product outdoors or in damp or humid conditions, and never handle it with damp or wet hands. This could lead to fatal electric shock.
- The product must always be operated under supervision.
- Due to the risk of fire or explosion, the product should not be operated in any environment that is or may be exposed to flammable gases, fumes or types of dust.
- The product is intended for private use only and not for commercial use.
- The product is only intended to regulate a soldering or reflow oven and should not be connected to any other devices.
- The product only isolates one pole of the socket on the connection cable from the mains. Even if the product is switched off, mains voltage may still be present around the socket and the connected device.
- Do not use the product as a "circuit breaker" for the connected device.
- Before connecting the product to a PC, you must unplug it from the mains socket.
- Handle the product with care as it can be damaged by impact or as a result of falling from even low heights.
- Do not continue to use the product if the product housing gets damaged. If it is still connected to the mains, do not touch it or any other attached devices. First, break off the electrical circuit to which the product is connected (switch off the automatic circuit breaker). You can now unplug the attached device and remove the controller from the mains socket. Then bring the product to a repair workshop or dispose of it in an environmentally appropriate way.
- Dispose of packaging carefully as it could be dangerous in the hands of children.
- If you are concerned about the functioning, operation or safety of the product, consult a specialist. Do not work on the product yourself.

### Disposal

The device must be disposed of at the end of its life according to the appropriate legal guidelines.

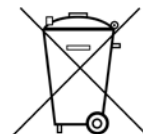

### Technical Data

Operating voltage:	230 V/AC 50 Hz (EU) 110 V/AC 60 Hz (USA)
Maximum power consumption:	1500 W
Fuse:	8A-T (EU) 15A-T (USA)
PC connection:	USB